

The ULTIMATE INDEXER

Figure - 1

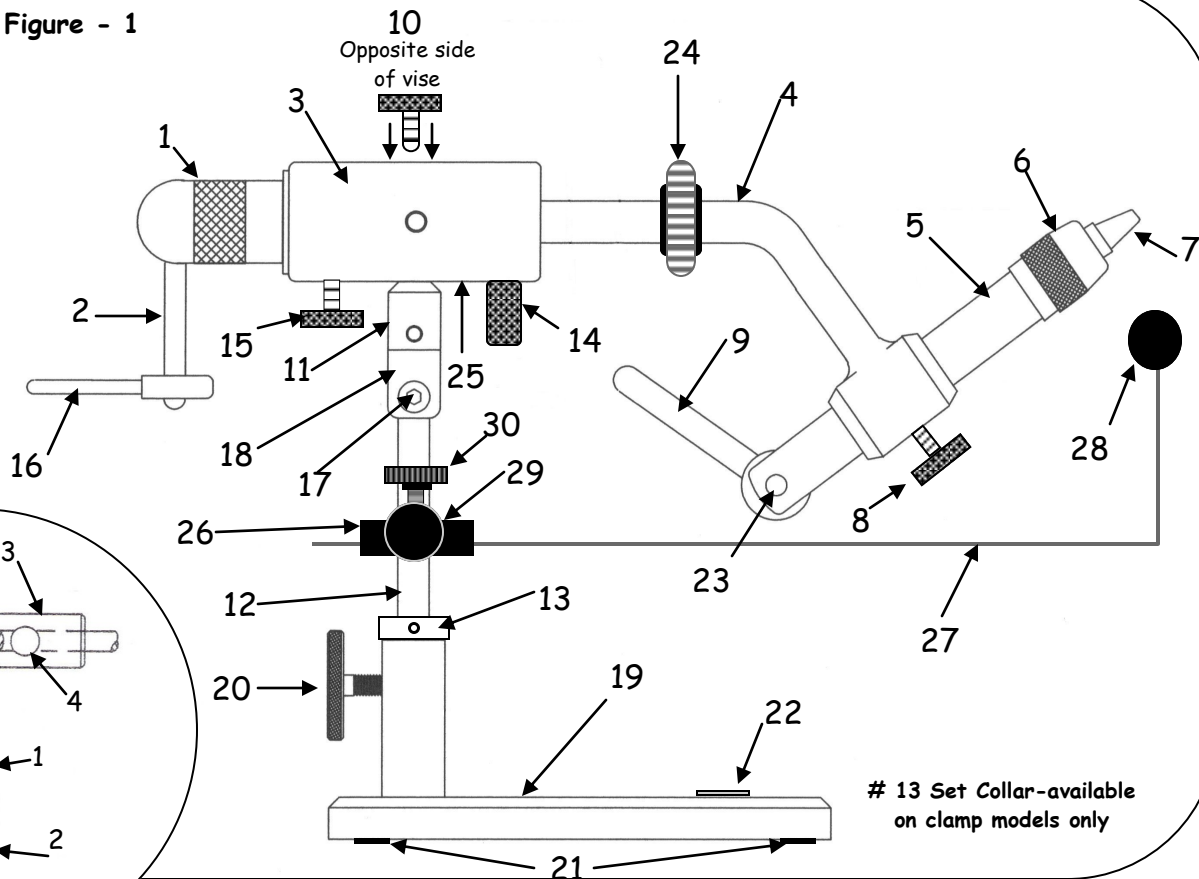


Figure - 1

Figure - 2

1. Hub
2. Hub Handle
3. Bearing Housing
4. Spindle
5. Vise Body
6. Forcing Cone
7. Jaws
8. Body Friction Screw
9. Cam Handle
10. Friction Screw (on Opposite Side)
11. Shaft Adaptor

12. Shaft
13. Set Collar
14. Indexing Knob
15. Rotary Lock Screw
16. 90 ° Handle Extension
17. Swivel Pin
18. Angle Adjustment Shaft Adaptor
19. Extra Large Pedestal Base
20. Base Lock Screw
21. Base Feet

22. Dyna-King Nameplate
23. Cam Pin
24. Material Clip
25. Serial Number
26. Bobbin Mount
27. Bobbin Wire
28. Bobbin Rest
29. Bobbin Mount Swivel
30. Bobbin Hanger Screw

1. Plunger Pin
2. Locking Set Screw
3. Bearing Housing
4. Friction Screw
5. Spindle

There is no need to unscrew the Locking set screw to engage or disengage the indexing knob feature. Simply grasp the knob & screw in to engage, or unscrew to disengage.

INSTRUCTIONS:

The **ULTIMATE INDEXER** allows the vise to be rotated to one of 8 positions allowing the epoxy body to partially cure in each stage. Rotating and pausing at the multiple positions will allow the epoxy to jell.

The indexing feature is easily adjusted by tightening or loosening the indexing knob as well as the friction screw to create the perfect amount of tension that you may prefer. These two screws work together to establish the ideal feel for the tyer. You may completely disengage the Indexing knob so your vise may spin freely if you'd like.

PLEASE BE SURE TO READ THE FULL INSTRUCTIONS ON THE OPPOSITE SIDE